# **Quick Start Guide**







# Charging for your LT-8000GT

LT-8000GT is with built-in lithium battery. Please use the USB-Type C cable for charging with compatible USB adapter. (Some fast charging PD adapter might not be compatible for LT-8000GT)

### **⚠** NOTE

It takes 4 hours charging time when the power of your LT-8000GT is off. Fully charged battery of your LT-8000GT would be used at least 14 hours continuously.



- Orange LED light is ON: Device battery is charging.
- Green LED is ON: Device battery is full.

#### Important Notice:

Battery life depends on the usage period and other condition such as temperature, or GPS signal. The usage time of the device might be less than the specification

# Circuit Race Mode 躞 RACE GNSS WIRELESS Select a Mode from the Ouick Use the arrow key to select Circuit Race Mode. Menu.





Use the arrow key to select Drag Race Mode.

Compare by different

customized settings.

Drag Race Mode

Select different Drag mode by different conditions.

### What's in the box?

Please check the following items are in the box.



**Qstarz** LT-8000GT device



Sticker

Motorbike Holder Kit

cable

USB Type-C

Quick Start Guide






# Quick Mount and holders (Optional accessories) ——

There are two 1/4 inches screw holes on LT-8000GT. Qstarz offers the optional accessories for car and motorcycle. You can use the optional Ostarz quick mount / vehicle holder, or find the standard 1/4 inches screw holders for your LT-8000GT.

Ouick mount is easy to install for your LT-8000GT

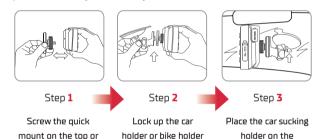

to the quick mount.



After GPS is fixed, select one of the nearby circuits.

 


Adjust the other settings.



Review the Drag results after each run


Jelly Case



- Power Key: Press to back to home menu. Hold 3 secs to power on/off
- Enter Key: To enter/confirm the selected option.
- Arrow Keys: Use to move up, down, left, or right on the screen.
- 6 Return / Cancel Key: Cancel the selected function or return to previous
- 6 Race Key: Press this button to start the RACE recording
- **Type C USB connection:** For charging and data transfer to QRacing PC. Device Reset/Restart key. Insert a pin to power off the device (Inside the protection cover).
- External GPS MCX jack: Located inside the protection cover.
- 1/4 inch screw hole: One on the back and the other one on the bottom of the device, which is for connecting to Quick Mount with Vehicle holder.
- Lanyard Hole: Located on the bottom of back side.

### Mount LT-8000GT / GPS external Antenna (Optional accessories)

For the best GPS signal performance, please place the device straight up and the upper of the device face up to the sky. Some electrical devices and window tint might interfere the GPS signal.

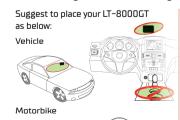

Safety Wire with vehicle using Lanvard hole

bottom of your

LT-8000GT.

LT-8000GT is already built-in extreme high frequency GPS antenna. In some conditions that the GPS signal of LT-8000GT might be weak or obstructed. Using external antenna would be improved the GPS signal

be located on the car roof or

iron metal

window and lock up.



of the track of the track.

 
10 m

20 m

40 m

70 m

• 50 m



TRACK'

Set Beacon

Width longer

than the width



Press the Race button to start laptiming. You can start when the screen showing "Ready"

For the better performance of your Qstarz experience, please update to the latest version of your Ostarz software and firmware. LT-8000GT is a GPS data logger device which using outdoor for the best GPS signal.

GPS satellite signal would be obstructed by solid substance such as bridge, building, tunnel, and trees. Some window tint would obstruct the GPS

If your device is not able to auto-recognize the track you go, please update to the latest trackmap version. You can setup a custom track, or contact us to request new track by email (info@qstarz.com).

LT-8000GT's Regulatory information is shown on Setting > Regulatory



6

# ORacing Mobile App (Support iOS / Android)







ORacing

Ann Store

Please download ORacing app from iOS App Store or Google Play.

QRacing APP is an analysis application for motorsport. With racing GPS data, you can review and share the synced video.

- Check the supported versions of your device from Qstarz website.
- Download App and activate your QRacing account with internet connected

# ORacing PC analysis software





QRacing PC software is developed for motorsport advanced analysis. You can analyze the acceleration/ brake point, speed, and position to improve the driving performance

Session

Decelerate

Accelerate

 $\overline{m}$ 





Speed

# https://qws.qstarz.com

QRacing Web (QWS) Service

Global Circuit Ranking and History sessions backup.



ORacing Web (OWS) is a new racing social media platform offering users

sharing their racing life. QRacing Web is auto sync to QRacing App offering

**NRacing Web** 

### Product Safety Notice

- High-temperature conditions might cause your device to change its behavior to regulate its temperature. Using your device in very hot conditions can permanently shorten battery life and cause damage.
- For safety purpose, please do not place your device might obstruct while driving / riding.
- Do NOT take apart the device otherwise the warranty would be invalidated.

For more product information, please visit Ostarz website. https://gws.gstarz.com/Official/8000gt/



### Connect LT-8000GT to ORacing App

- The Bluetooth is enabled while your LT-8000GT is power on.
- Turn on the Bluetooth function on your smartphone and start your QRacing App.
- 3 Connect LT-8000GT device to your QRacing account after downloaded and registered the ORacing APP.
- 4 Bind the serial number of your LT-8000GT to your ORacing account by tapping "Connect" 🤄 on Racer 🙆 or Go 😥 page to Add Qstarz

- LT-8000GT can do lap timing stand-alone without internet.
- LT-8000GT can be connected to ORacing app by Bluetooth and doing lap timing at the same time when internet connected.

# How to get the Software key for **ORacing PC Analysis software**

Register your own account from QRacing Web online. You will get a new ORacing software key with your personal account. [https://gws.gstarz.com]

Scan the OR code to read the registration instruction



# Important Notice: Backup

Regularly back up and format the memory of the device would keep your device health and work as usual

### **⚠** NOTE

Please BACKUP your data BEFORE format the memory of your LT-8000GT, otherwise it might cause the data loss or damage

# Federal Communications Commission Interference Statement

#### FCC For Class B device:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver

-Connect the equipment into an outlet on a circuit different from that to which the

-Consult the dealer or an experienced radio/ TV technician for help

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

**RF Exposure warning**This equipment must be installed and operated in accordance with provided instructions and the antennals) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance. To comply with RF exposure compliance requirements. the device should be used as described in the manual. The device should not be used in other configurations.

## Use Wi-Fi for LT-8000GT

#### Sessions uploads to your ORacing account:

- 1 Select "WIRELESS" > Wi-Fi > "ON" to turn on the Wi-Fi wireless function on LT-8000GT.
- Select Wi-Fi information and confirm the SSID and Password
- 3 Open QRacing App and connect Wi-Fi network to your QRacing account by tapping Racer (4) > Connect (5) > Wi-Fi Network
- 4 Enter the SSID and Password. Select "Join" then finished the connection.
- **⑤** Go to "History"> tap Download **♦** and select the sessions to upload.

#### Device updates:

1 Tap Connect ← > Wi-Fi network > LT-8000GT SSID to check or update to the latest version when LT-8000GT Wi-Fi is turned on

When Wi-Fi ON, some functions of LT-8000GT might not be used Please TURN OFF Wi-Fi connection to keep using lap-timing functions. During Wi-Fi transferring, DO NOT turn off Wi-Fi otherwise it might rause the data loss or damage

Wi-Fi function is not for surfing internet

# Download data to QRacing PC from LT-8000GT

Download the latest QRacing PC analysis software from Qstarz website. http://racing.qstarz.com/Products/Qracing/QRacing-History.html

[Note: Must enter the QRacing software Key for the first time]

Power off your LT-80000GT, and use Qstarz USB Type-C cable to connect your device to the computer. During data is transferring, please DO NOT remove the USB cable. It might cause the files damage or lost.

- QRacing PC software can only be installed within Microsoft Windows system
- \*For more details please refer to QRacing Manual. Help > Users Manual



# Technical Specifications

- Model: LT 8000GT
- ONSS 25Hz GPS / GLONASS / Galileo / Beidou / QZSS
- Display : 3.2" Color LCD (320x240px)
- Wireless: Bluetooth LE 5.0 + Wi-Fi 2.4 GHz
- Memory: 8 GB
- Battery type and life: Rechargeable, lithium-ion, Up to 14 hours
- Sensor: Accelerometer and Gyroscope
- Antenna: Built in and external MCX plug
- Charging port : USB Type C
- Input : DC 5V, 750 mA
- Water rating: IPX7 water resistant
- Dimension and weight: 11.7 x 7.2 x 3.1 cm, 158 grams
- Operating / Charging temperature: 10 to 60 °C / 0 to 45 °C

#### Declaration of Conformity (RE Directive 2014/53/EU) **EU DECLARATION OF CONFORMITY**

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as

rollows: Hereby, Ostarz International Co., Ltd. address at 6F-2, No. 160, Ming Chuan E. Rd, Sec. 6, Taipei, Taiwan, declares that the radio equipment type LT-8000GT GPS Lap timer is in compliance with Directive 2014/53/EU

The full text of the EU declaration of conformity is available at the following internet address: http://racing.gstarz.com

### CE RF exposure

### RF Exposure information

This device meets the EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection. This equipment should be installed and operated with minimum distance 20 cm betweer

the radiator and your body. When use is prohibited, such as while traveling in aircraft, or when asked to do so by

authorities, power off LT-8000GT to turn off the device's wireless transmitted

Android™ is a registered trademark of Google Inc. Apple® is a trademark of Apple Inc., registered in the United States and other countries. The Bluetooth® word and trademarks are owned by the Bluetooth SIG Inc. Wi-Fi® is a registered trademark of Wi-Fi® Alliance. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are trademarks of their respective



6F-2, No. 160, Ming Chuan E. Rd., Sec. 6, Taipei 114, Taiwan, R.O.C. TEL / +886-2-2792-0061

CE